



Specifications – Antennas and Extensions



Antennas and Extensions.....	2
Contact Us.....	3

Antennas and Extensions

The antennas guarantee connectivity for Eco-Adapt control units. They connect to the control units via SMA connectors, and are fitted with a 2.5m cable for mounting on top of the electrical cabinet. They are available in high or standard sensitivity.




Specifications			
	ANT-868STD	ANT-868HF-MAG	ANT-868HF-FIX
Type	1/4 wave	1/4 wave	1/4 wave
Frequency Range	824-960/1710-2170MHz	698-960/1710-3800MHz	698-960/1710-3800MHz
Gain max	+2dBi	+3dBi	+4dBi
Polarization	Vertical	Vertical	Vertical
Directionnality	Omni	Omni	Omni
Connector	RG-174/SMA male connector	RG-174/SMA male connector	CS29/SMA male connector
Dimensions (mm)	87x27, 3m length	95x54, 2m length, 280g	H:82, bracket base : 60x48, H bracket : 82, 5m length, 340g
Mounting	Magnetic	Magnetic	Screw
Environment	Indoor/Outdoor (except SMA)	Indoor/Outdoor (except SMA)	Indoor/Outdoor (except SMA)

Antenna extensions enable antennas to be moved to locations offering better network quality, particularly outdoors.

Specifications		
	RAL-ANT-5M	RAL-ANT-10M
Type	RG-58	RG-58
Length	5m	10m
Connectors	SMA	
Environment	Outdoor (except connector)	

Contact Us

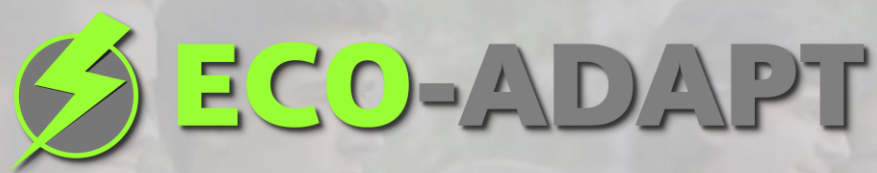

Eco-Adapt 39 rue de Châteaudun, 75009 Paris, FRANCE

www.eco-adapt.com



contact@eco-adapt.com



+33 1 70 61 67 05